



Ultrasonic Thickness Gauge

Upad X400


X 400 : High Performance, Low Price

Upad X 400 Ultrasonic Thickness Gauge will be the best choice for accomplishing measurement. It fits many kinds of metal, such as steel, cast steel, aluminum, plastic, China glass, glass fiber and any other good conductors of ultrasonic.

The Bluetooth function reads and transmits data more clearly and conveniently. LCD display screen, reading data is more intuitive and clear

Advanced Auto Probe Zeroing Calibration and Echo-Echo mode are applied on Upad X 400. Taking more accurate measuring result and higher production rate to you.

Upad X 400 is creative, it will supply a superior experience for users.

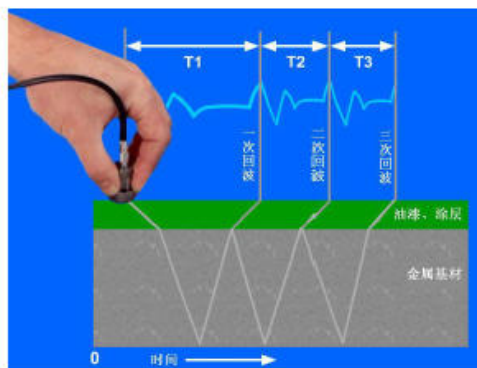

The indicator of eliminating coating


No 0	MAX	10.00
File 0		
EE	10.00	mm
300.0	MIN	1.00
0.00		

Measuring Interface

- Inco Style Menu
- Showing different data modes
- Stroll Bars Indicates Function
- Free to change : Huge front and normal
- USB for Storage, Plug and Play
Covenient to read thickness values
- Massive Data Memory-100,000 data sets
1000 files could be saved , every file could memory 1000 data sets



Brief Interface

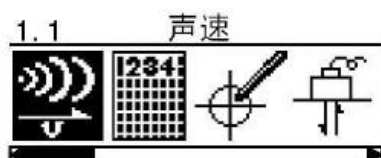

Menu

■ Statistic Function

Online statistic : Max Min, Standard Deviation
Document Statistic : Max Min Average, mean square error

■ Probe Connection/Coupling Indicator

■ Bluetooth function

it is more convenient to transfer data, and it is more intuitive and clear to read data.

■ LCD display screen

clear reading value

■ Accuracy : 0.1/0.01mm or 0.01/0.001 inch resolution

■ Extra-long standby time : 200 hours.

performance index	
Working principle	Ultrasound (ultrasonic pulse echo / echo echo)
Detection range	Normal mode : 0.75~400mm Penetrate the coating : 2~25mm (Depending on the probe, the measured material and surface condition)
Resolution	0.1mm (> 100mm)/0.01mm (<100mm)
Indicator	± (0.5%H+0.01) mm
Velocity	1000~9999m/s, Preset 5 commonly used material velocity
Calibration	Through the realization of real-time calibration probe zero unique

automatic zero calibration technique
V range correction Auto
Probe connection indicating Yes
Coupling condition Cue signal coupling intensity: measured value displayed solid / hollow change, visual indication of whether the normal measurement
Appearance size 165×82×30 mm
Weight 250g (Including battery)
Work environment Temperature: -20℃~70℃ Humidity: 5%~90%

The environment without strong vibration, no strong magnetic field, non corrosive medium and serious dust.
Measuring Range: Normal : 0.75~400mm Coating : 2-25mm
Excitation pulse 150V Negative spike
Receiving system
Gain High / low / automatic
Frequency bandwidth 0.5~15MHz
Display
LCD dot matrix display High contrast 128X64 Beautiful characters Number, Symbol, High Brightness EL Backlight

Refresh rate measurement Single point measurement of 5 times per second, 25 times / sec scan mode	threshold	Language Chinese/ English
Measured value / alarm	Storage	Unit mm/inch
Measured value display 3 custom measurement display area, can choose online statistics or sound	Data set 1000 Sets	Power Source
Statistical data Online Statistics: maximum, minimum, standard deviation Document statistics: maximum / small value, mean, variance	The thickness values 1000sets/Group Linearity	Battery 1.5V AAA x 4
Alarm Acousto optic alarm	USB Storage Connection USB is allowed, convenient to read thickness values	Working time Can work continuously for 200 hours (standard test conditions)
	Input and output probeconnection 00 (C5) x2	Standard Package
	Communication RS232/USB	Host 1 Instructions 1 Probe 1 Packingbox 1 Battery 1 couplant 1

... Probe of Our Thickness Gauge

Model	Automatic zero	Measurement precision	USB	Penetrate the coating	Statistical function	Storage Capacity
Upad X100	V	0.1/0.01mm	X	X	Online statistics	100 Groups
Upad X200	V	0.1/0.01mm	V	X	Online statistics / data statistics	500 Groups
Upad X300	V	0.1/0.01mm	V	V	Online statistics / data statistics	1000 Groups

... Probe of Our Thickness Gauge

Application	Mode	Rate	Probe Diameter	Measuring range	Minimum diameter
Standard application	DA301S	5 MHz	10mm	0.75mm~400.0mm (Steel)	Φ20mm×3.0mm
Standard application	DA301S/90	5 MHz	10mm	0.75mm~400.0mm (Steel)	Φ20mm×3.0mm
Thick Wall	DA303S	2 MHz	22mm	3.0mm~300.0mm (Steel)	20mm
Thin wall	DA312S	7 MHz	6mm	0.75mm~80.0mm (Steel)	Φ15mm×2.0mm
High temperature	HT400S	5 MHz	14mm	3~200mm (Steel)	30mm
High attenuation	DA408S	2 MHz	22mm	40mm ↓ (Grey cast iron HT200)	20mm

... Commonly used material velocity

Material type		Sound velocity	
		inch/us	m/s
Aluminum	Aluminum	0.250	6340~6400
Steel, common	Steel, common	0.233	5920
Steel, stainless	Steel, stainless	0.226	5740
Brass	Brass	0.173	4399
Copper	Copper	0.186	4720
Iron	Iron	0.233	5930
Cast Iron	Cast Iron	0.173~0.229	4400~5820
Lead	Lead	0.094	2400
Silver	Silver	0.142	3607
Gold	Gold	0.128	3251
Titanium	Titanium	0.236	5990
Tin	Tin	0.117	2960
Nickel	Nickel	0.222	5639
Porcelain	Porcelain	0.230	5842
Rubber, vulcanized	Rubber, vulcanized	0.091	2311
Water	Water	0.058	1473



Ultrasonic Thickness Gauge

Upad X400


X 400 : High Performance, Low Price

Upad X 400 Ultrasonic Thickness Gauge will be the best choice for accomplishing measurement. It fits many kinds of metal, such as steel, cast steel, aluminum, plastic, China glass, glass fiber and any other good conductors of ultrasonic.

The Bluetooth function reads and transmits data more clearly and conveniently. LCD display screen, reading data is more intuitive and clear

Advanced Auto Probe Zeroing Calibration and Echo-Echo mode are applied on Upad X 400. Taking more accurate measuring result and higher production rate to you.

Upad X 400 is creative, it will supply a superior experience for users.

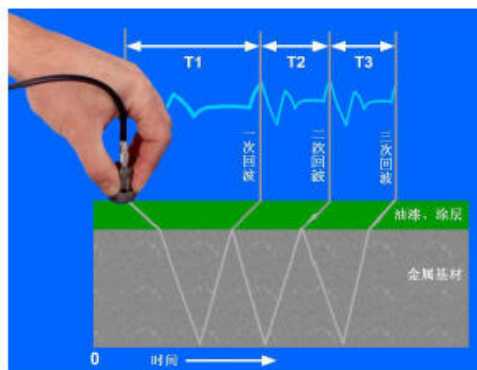

The indicator of eliminating coating

No 0	MAX	10.00
File 0		
EE	10.00	mm
↑ 300.0	MIN	1.00
↓ 0.00		

- Inco Style Menu
- Showing different data modes
- Stroll Bars Indicates Function
- Free to change : Huge front and normal
- USB for Storage, Plug and Play
Covenient to read thickness values
- Massive Data Memory-100,000 data sets
1000 files could be saved , every file could memory 1000 data sets